













Functions	Command Format	Example
Set Admin Number	admin123456+space+mobile number with country code	admin123456 0086134******
Back to Factory Setting	begin123456	begin123456
Password Change	password+old password+space+new password	password123456 654321
Restart	rst	
	apn+123456+apn content	apn123456 cmnet
APN	apnuser+123456+space+content	
	apnpasswd+123456+space+content	
IP&Port	adminip+123456+space+ip+space+port	admin123456 47.254.77.28 7700
Domain	SZCS,123456,DOMAIN=d.micodus.net:7700	
	disable tow truck alarm: tow0	tow0
	SMS warning: tow1,+alarm distance(500-10000m)	tow1,300
Tow Truck Alarm	call warning: tow2,+alarm distance	tow2,300
	SMS+call warning: tow3,+alarm distance	tow3,300
	website warning: tow4,+alarm distance	tow4,300

ACC Auto Arm(on)	auto1	auto1
ACC Auto Arm(off)	auto0	auto0
ACC Auto Arm alarm time	acclt,+alarm time(seconds)	accit,30
Google Maps Link	G123456# or where	
Data Upload Frequency	upload123456+space+time	upload123456 15
Time Zone	timezone+123456+space+GMT No.	timezone123456 -4
Parameter Query	param1	
	param2	
Status	status	
Arm	111 or SF	
Disarm	000 or CF	
Cut Off Fuel	555	
Resume Fuel	666	
Movement Alarm	move+alarm distance	move300
Overspeed Alarm	speed+123456+space+080(km/h)	speed123456 080
IMEI Checking	imei+123456	imei123456